



txPER[®]

Quick Installation Guide

IP Box Camera

www.telexper.com

1

IP Camera Introduction

Product Front View



Product Rear View



Notice:

- * You can provide power to nCam Series cameras via Telexper PoE Gigabit Hub or you can connect DC12V In (pin-3) and GND (pin-4) for power supply (refer to above pictures).
- * Please use the **CAT-6/CAT-5e** RJ-45 cable to connect each Telexper camera.
- * The effective distance between the PoE Hub and IP camera is up to 100 meter.

IP CCTV Installation Diagram

