



txPER[®]

Quick Installation Guide

1CH/4CH Network Video Server

www.telexper.com

1CH/4CH Network Video Server

Product Front View: nVS-1P




nVS-4P



Product Rear View: nVS-1P



nVS-4P

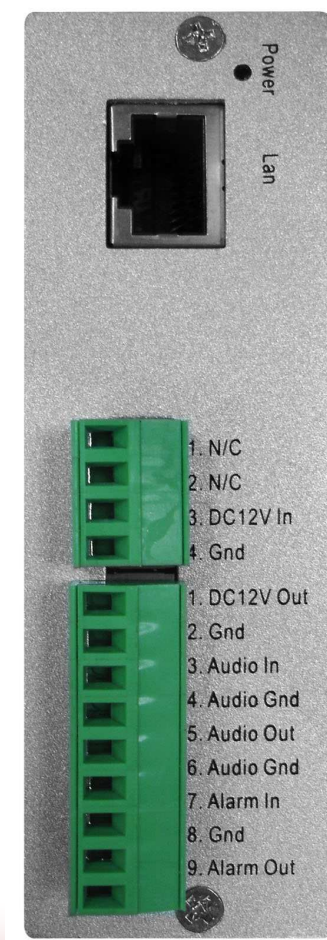

2

Notice:

- * For nVS-1P & nVS-4P, the power is provided via PoE by Gigabit PoE HUB. Thus, it is **not** necessary to connect the DC12V In (pin-3) and GND (pin-4).
- * Please use the **CAT-6** RJ-45 cable to connect each Telexper device.
- * Please use the **75Ω** coaxial video cable connecting the camera to the video server.
- * The DC12V Output at **pin-5** provides the **max 8W** electric power.
- * The effective distance away from the PoE Hub is 100 meters.

The states of the Power LED




- * Red Color: Power on when connected to the Gigabit PoE HUB
- * Red Flashiness: When the LAN is active


3

Quick Installation


Step 1: nVS-1P

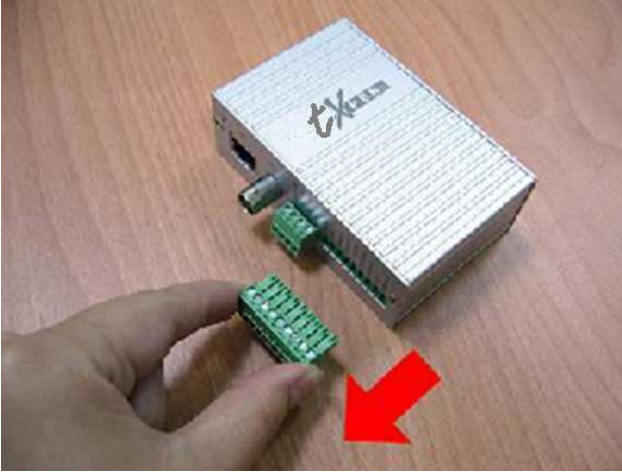


nVS-4P

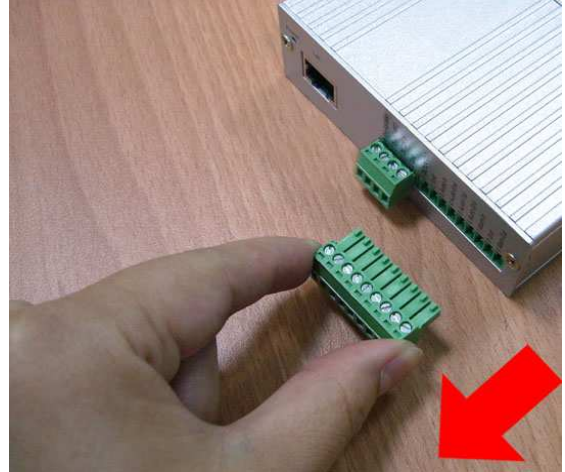


Step2

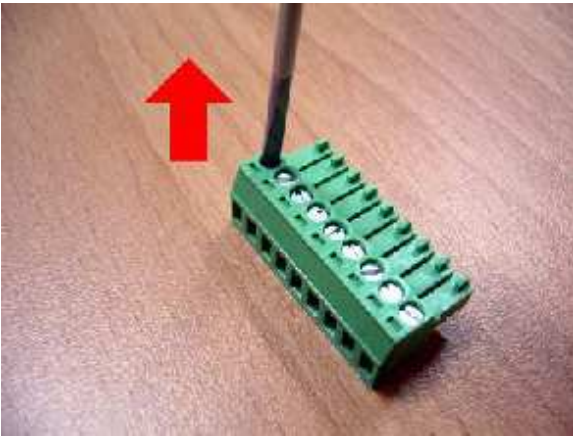


Step3

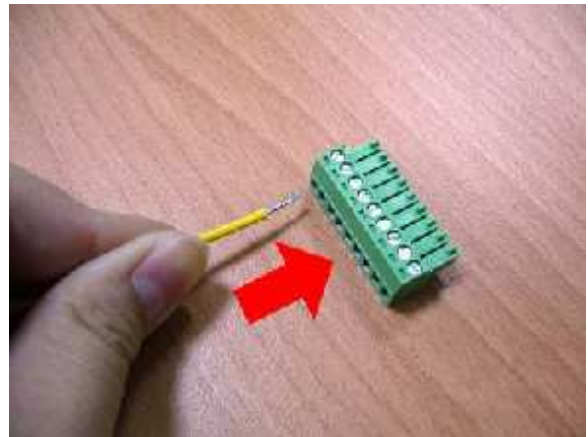

Step4

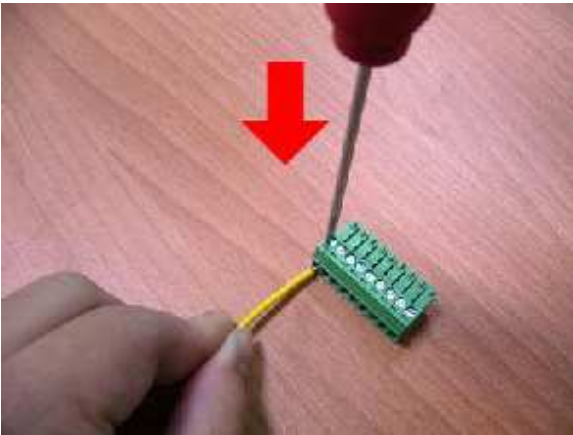



Step5

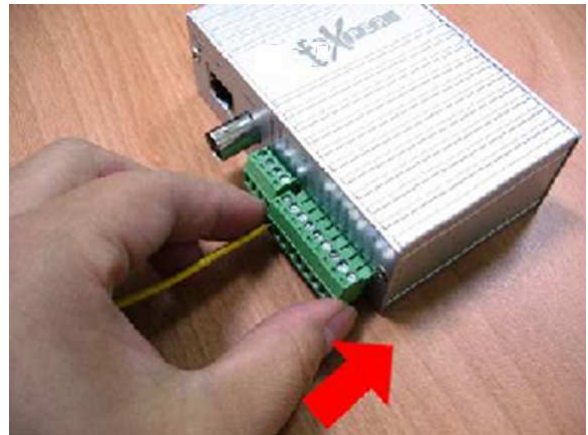

Bracket Support:

nVS-1P

nVS-4P

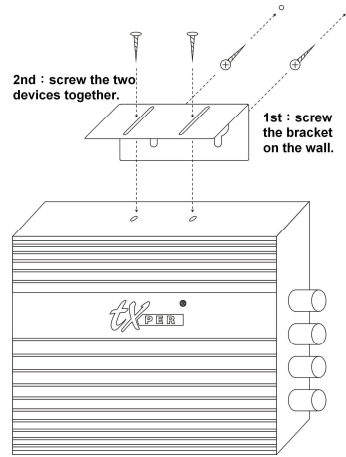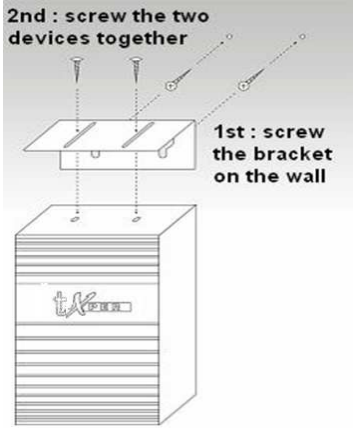

IP CCTV Installation Diagram

