


Tech Issue	TXP-012	Created	Jan. 20, 2009
		Modified	Dec. 10, 2010
Category	Configuration		
Product	All products		
Title	How to connect other manufacturer's speed dome to Telexper Video Server?		

How to connect other manufacturer's speed dome to Telexper Video Server?


1. You may obtain the Address, Baudrate and Protocol at the botton of the PTZ High Speed Dome device or refer to the user manual that came with your device.

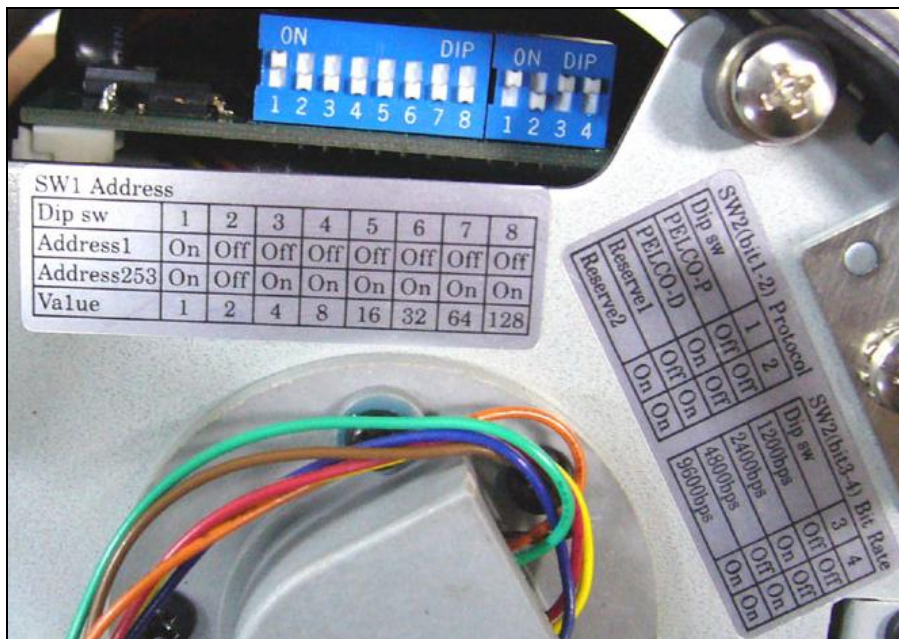

2. For PTZ High Speed Dome with **RS422** connector (as illustrated below), connect RX+ to D+ of the nVS, connect RX- to D- of nVS, and connect BNC connector to the Video slot.

For PTZ High Speed Dome with **RS485** connector, connect D+ to D+ of the nVS, connect D- to D- of nVS, and connect BNC connector to the Video slot.

(Back of Speed Dome)

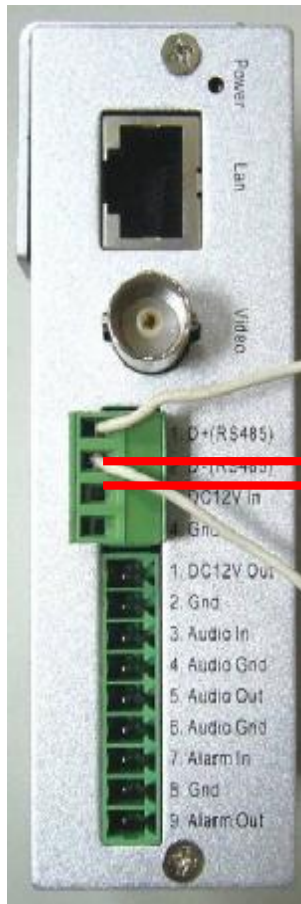

(Back of Speed Dome with RS422 Connector)

