


Tech Issue	TXP-013	Created	Jan. 20, 2009
		Modified	Oct. 18, 2010
Category	Configuration		
Product	All products		
Title	How to connect RS-485 on Video Server to nGPIO?		

How to connect RS-485 on Video Server to nGPIO?

Please connect the RS485 controller DT+ (D+) pin to the D+ pin of the Video Server, and also the DT-(D-) pin to the D-pin of the Video Server. The power could provide from the 12V OUT pin of the Video Server, and make sure both of the GND pin connected well to enable the power supplying.

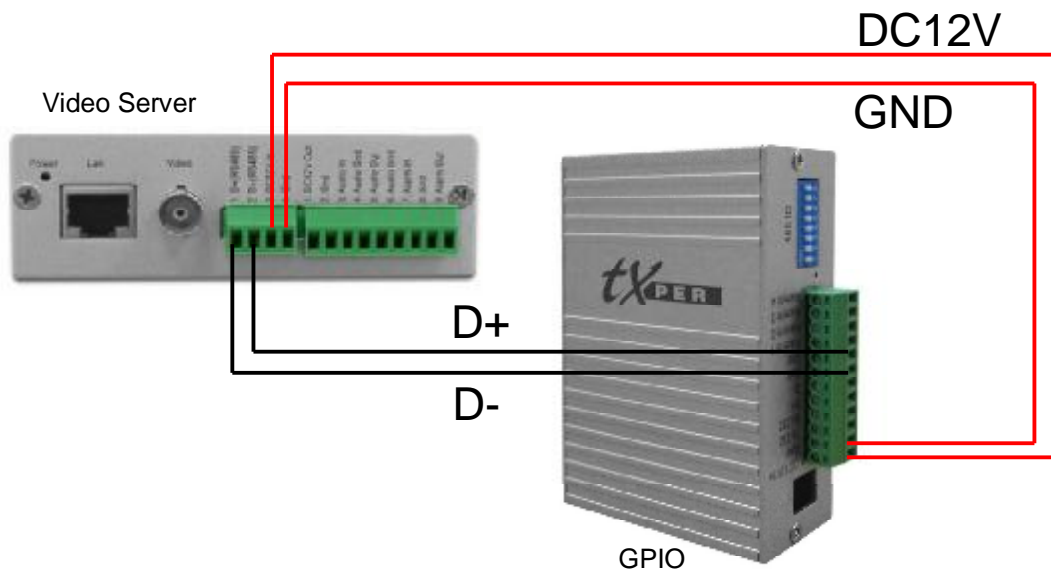

For the spec of nGPIO and Video Server, please check our website at

<http://www.telexper.com/telexper-en/products/products-ipcctv.htm>

For instructions for nGPIO to connect to Alarm In/Out devices, please refer to

FAQ, Q-10 at <http://www.telexper.com/telexper-en/faq/faq-ip.htm>