



txPER[®]

Quick Installation Guide

IP Bullet Camera

www.telexper.com

1

IP Camera Introduction

Product Front View




Product Rear View



Notice:

- * You can provide power to nCam Series cameras via Telexper PoE Gigabit Hub or you can connect DC12V In (pin-3) and GND (pin-4) for power supply (refer to above pictures).
- * Please use the **CAT-6/CAT-5e** RJ-45 cable to connect each Telexper camera.
- * The effective distance between the PoE Hub and IP camera is up to 100 meter.

IP CCTV Installation Diagram

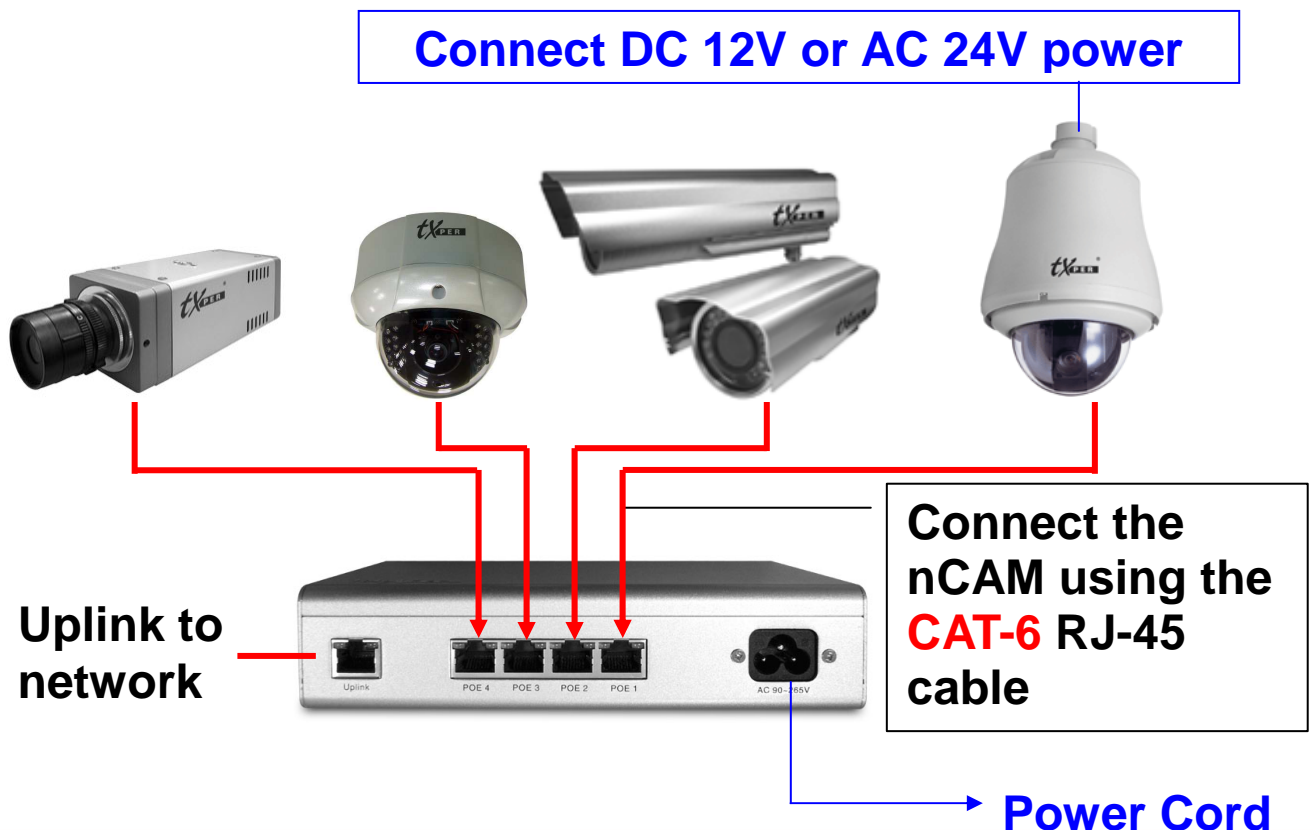


3

Focal adjustment for manual vari-focal cameras:

* **Bullet Camera:**

- (1) Remove the lens cover.
- (2) Loosen the two knobs on the lens to adjust focus. Tighten the knobs after adjustment.

(1)

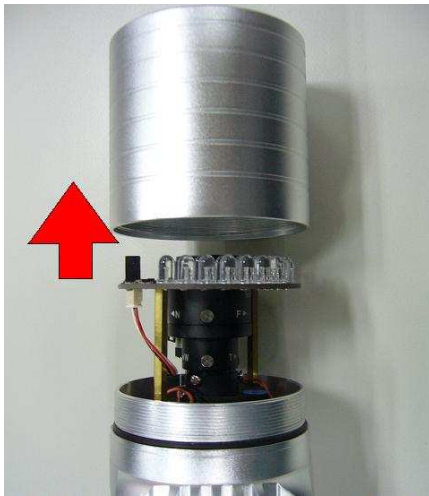

(2)

